



DEMAND MORE

Intex Technologies (India) Ltd.

GPRS SETTING Steps for IN6622



DEMAND MORE

IN 6622 GPRS Setting Steps:-

Step-1 (Default Profile):-

1. Go to Menu->Setting->Select 3rd Option->Data Account->Select Account(e.g Airtel,vodaphone as per ur GPRS Sim.)-> Save->Done ->Back->WAP Setting->WAP Profiles-> Select Account(e.g Airtel,vodaphone as per ur GPRS->Save->Back-> Select Sim1/Sim2 as per GPRS activated ->Ok->Done->Back->Back
2. Go to Menu->Services->WAP explorer->Select->Select Sim1/Sim2 as per GPRS activated->Option->Go to Homepage(Now u can browse the GPRS



DEMAND MORE

Step-2 (Create Profile):-

1. Go to Menu->Setting->Select 3rd Option->Data Account->Select Empty Account->Enter Account Name(As per your Sim/Choice)->Enter APN(As per Your Sim)-> Keep below parameter's as it is

User Name,Password,Auth.type->Save->Done->Back.

2. Go to->WAP Setting->WAP Profiles->Select Empty Account->Enter Profile name as per ur GPRS->Enter Homepage->Connection type->Select Connection Oriented->Proxy/Port(Leave Blank)->Data Accounts->Select Account which you had created->Save->Done->Back->Select Sim Profile which you had created(Sim1/Sim2-as per GPRS activated)->Ok->Done
->Back->Back

3. Go to Menu->Services->WAP explorer->Select Sim1/Sim2->Options
->Homepage->Now u can browse the GPRS).

ITIL-GPRS-Setting Steps For IN6622-L2-27012010 ©Intex. All rights reserved .



DEMAND MORE